



No Utility Bills Inc.

www.noutilitybills.com

Tel: (780)628-4835

#301 Lyall Subdivision, County of Athabasca, AB, Canada

VIEWINGS BY APPOINTMENT ONLY!

List Price From

Sale Price From

Prices are subject to change
without notice! 071908


The Harman Oakleaf Wood Stove



The Oakleaf wood stove features a compact design ideal for smaller spaces. Featuring Harman's exclusive FireDome Combustion Technology, the Oakleaf completely burns the wood delivering high efficiency and low maintenance. The FireDome Combustion system is made of a ceramic refractory material that provides even heat output while maintaining high insulating capabilities.

Offering more features and options, the Oakleaf is designed for convenience. The top load feature allows the maximum amount of wood to be loaded while the large ash pan means less frequent emptying. The well known Harman style of the Oakleaf features quality castings with three finish options. The Oakleaf is sure to bring warmth to any room.

Typical Low Burn Rate Patterns for Three Basic Types of Wood-Burning Stoves

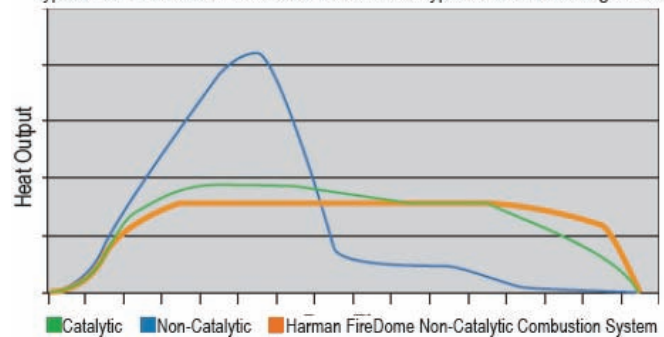

The Oakleaf's Optional Cooking Grill allows you to grill your favorite meats and vegetables without altering your home's air quality. This stainless steel grill is easy to remove and clean.



Fuel	Wood
BTU Range	15,000 to 39,000
Heating Capacity*	Up to 1,600 Square Feet
Firebox Capacity	1.75 cu.ft.
Log Length	18" maximum
Burn Time*	Up to 17 hours
Average Emissions	2.2 Grams per hour
Emissions on Low	.8 grams per hour
Flue Size	6" Top or Rear Vent
*Minimum Chimney	16' Feet @ Sea Level
Depth	27-5/8 inches
Height	25 inches
Width	27-1/8 inches
Outside Air Size	4 inches (optional)
Weight	430 lbs
Mobile Home Approved	Yes *US Only
Floor Protection	Non-combustible - k.84
Rear Clearance	13" *Minimum* W/DWSP/RHS
Testing	UL 1482-10 CAN/ULC-S627-00


No Utility Bills Inc.

www.noutilitybills.com


Tel: (780)628-4835

#301 Lyall Subdivision, County of Athabasca, AB, Canada


The Harman Oakleaf Wood Stove

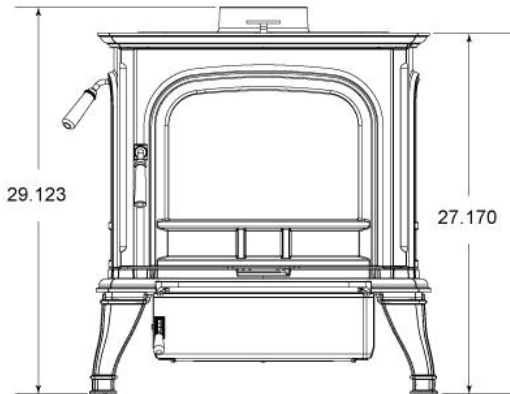


Front View

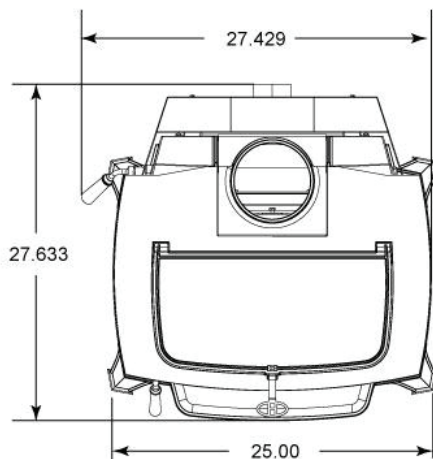


Top View

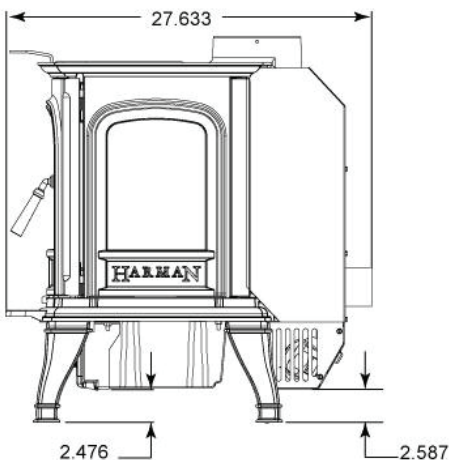


Side View

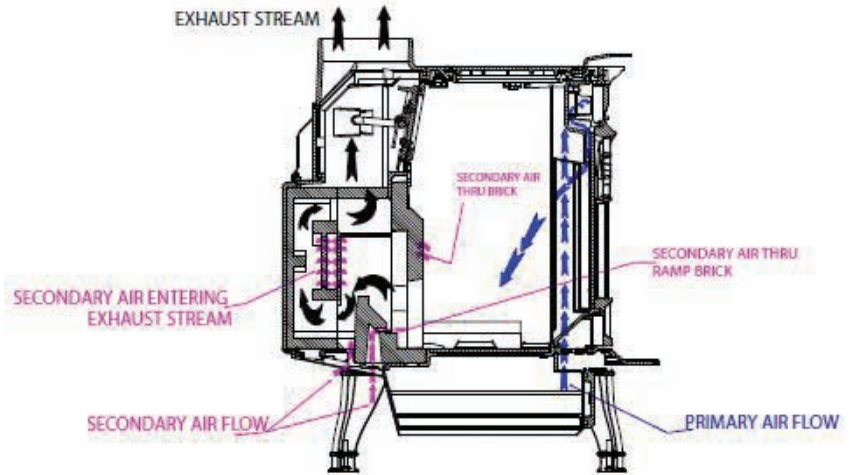


PRIMARY & SECONDARY AIR FLOW

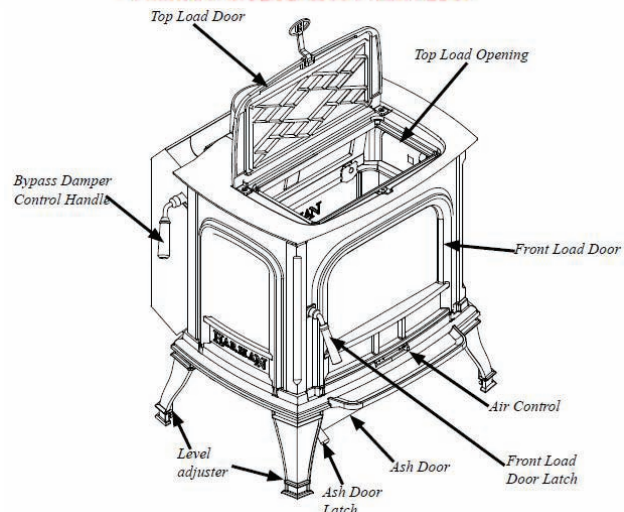

Component Locations

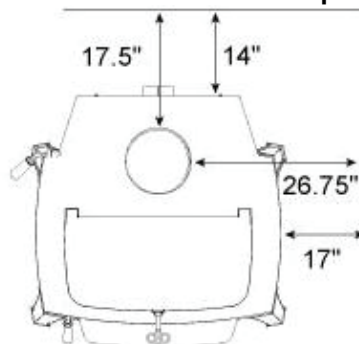

Standard Installation

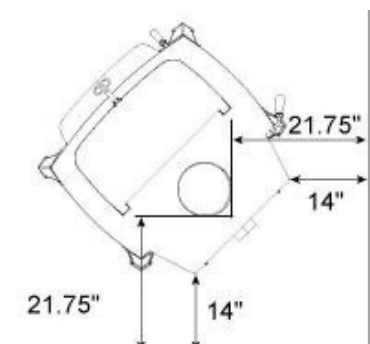

Corner Installation

Clearances Single Wall Stove Pipe